



# KARAG









bathroom experience...


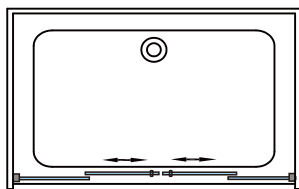


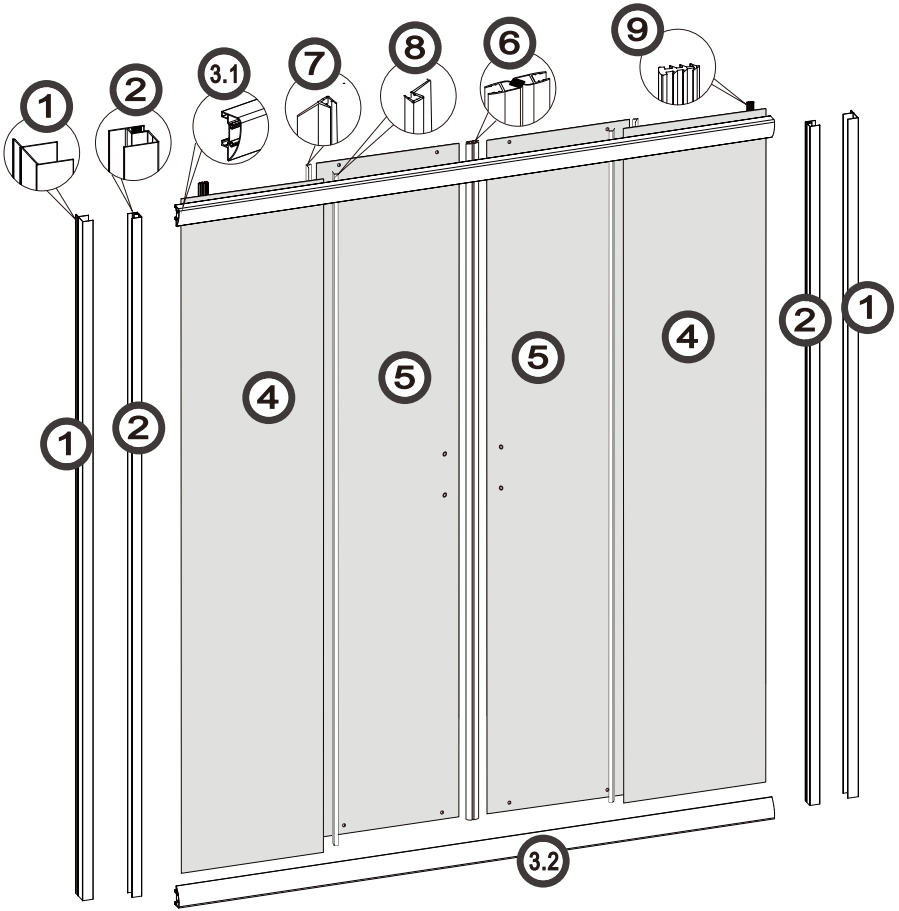NEW FLORA 600

INSTALLATION MANUAL



<p>A1</p>  <p>x12</p>	<p>A2</p>  <p>x12</p>	<p>A3</p>  <p>ST4x10</p> <p>x10</p>	<p>A4</p>  <p>x4</p>
<p>C</p>  <p>ST4x30</p> <p>x14</p>	<p>C1</p>  <p>x6</p>	<p>D</p>  <p>x4</p>	<p>F</p>  <p>x4</p>


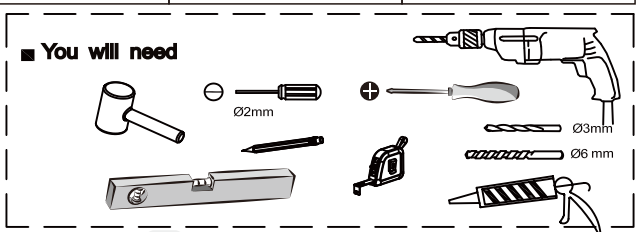
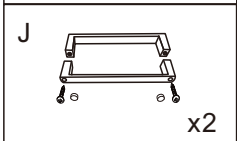






C









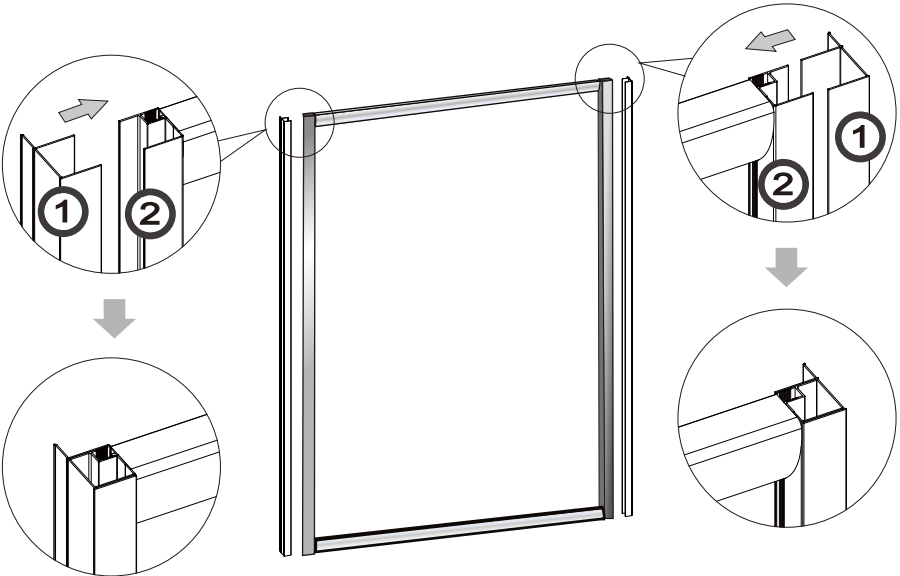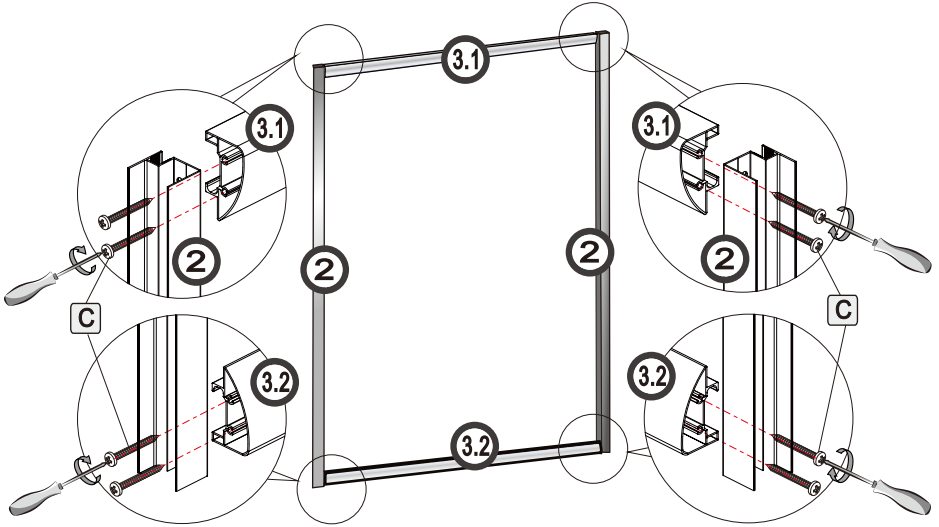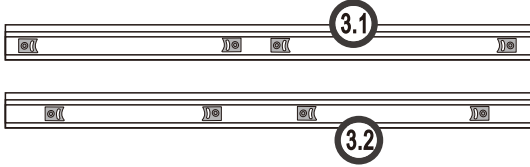



ST4x30


x8

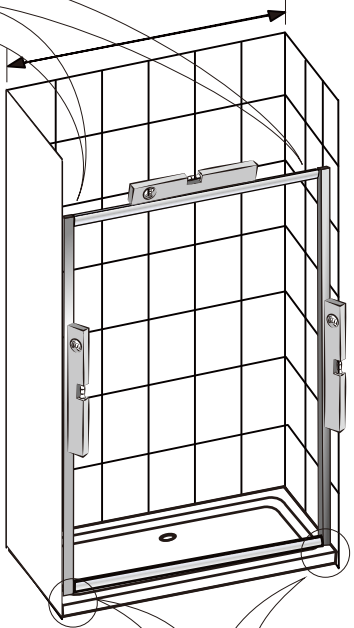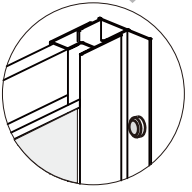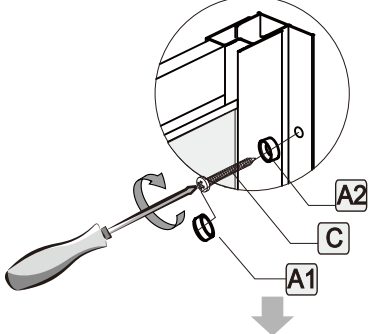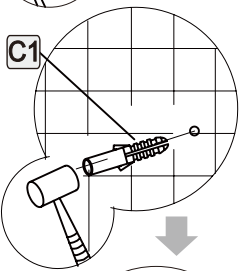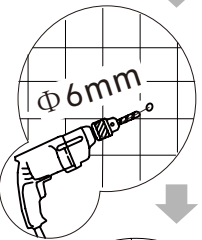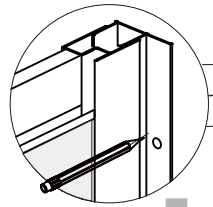

<p>C</p>  <p>ST4x30</p> <p>x6</p>	<p>C1</p>  <p>x6</p>	<p>A1</p>  <p>x6</p>	<p>A2</p>  <p>x6</p>
---	--	--	--



<p>C</p>  <p>ST4x30</p> <p>x6</p>	<p>C1</p>  <p>x6</p>	<p>A1</p>  <p>x6</p>	<p>A2</p>  <p>x6</p>
---	--	--	--

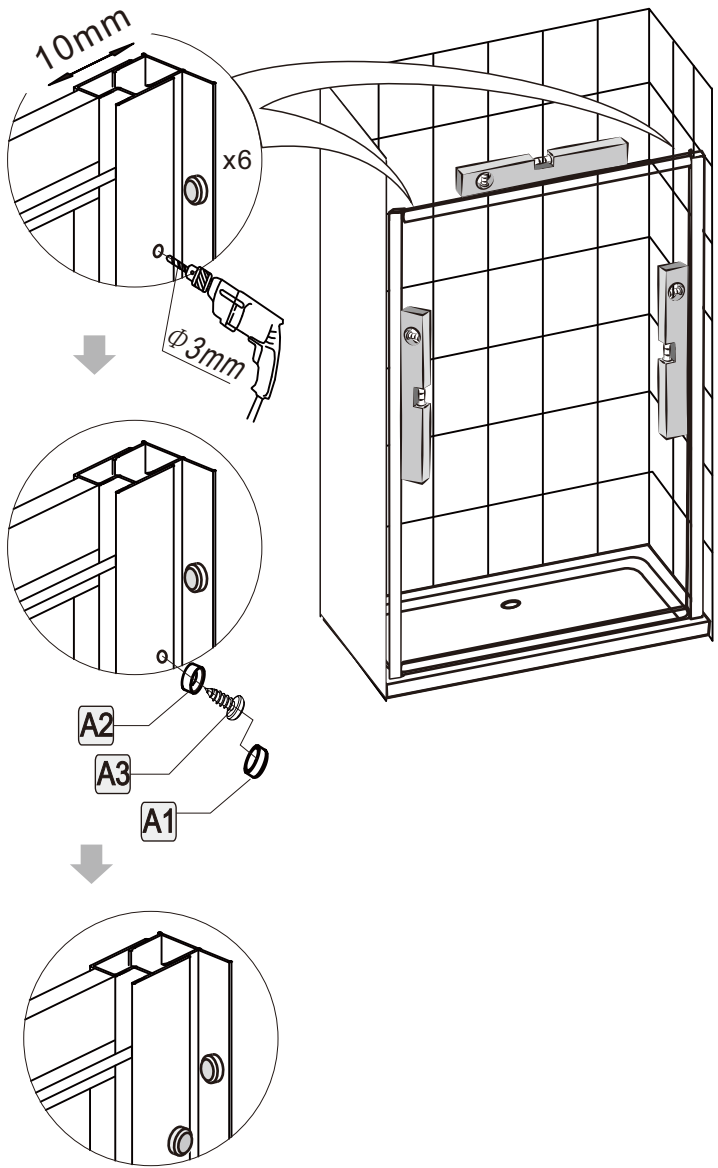


A3



ST4x10

x4

A4



x4

